


Repair instruction**Description: C2 C3 Switch****Part number:20107****Look for Service Centers, Point of Sale addresses and other information on: www.thetford-europe.com**

Version:	V1
Date:	08/05/2006
Tools required:	


C2/C3 Toilet.

Pull the waste tank out of the toilet by pushing down the yellow clip.

Remove the plug from the flush knob with a flat screwdriver.



Remove the screw in the flush knob with a long Philips head screwdriver.

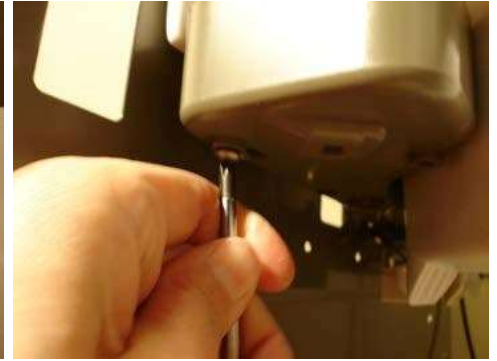

Remove the four screws from the mechanism inside the toilet.


A

Remove the switch cover.



B

Pull out the cable from the saddle.

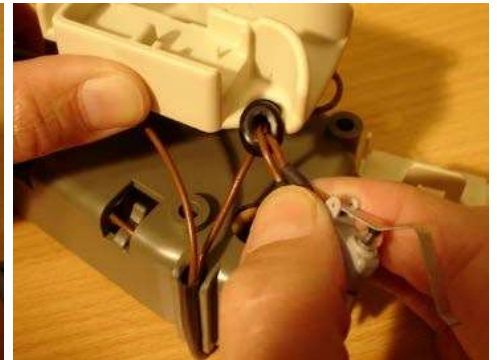

C

D


Cut the two cables from the switch.



E

Strip the both wires with a wire stripper.

Pull the cables into the connectors from the new switch.

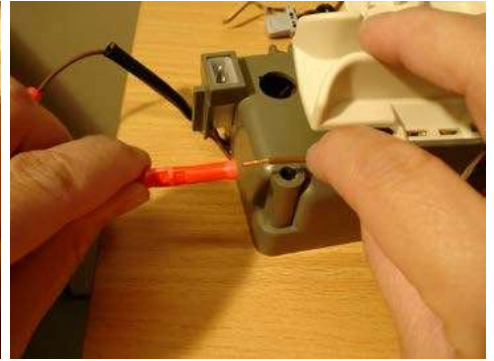

F


Connect the connectors from the new switch on the cables with the shrink pliers.

Pull back the cable into the saddle.

Place the new switch back in his position.

G

Replace the switch cover.

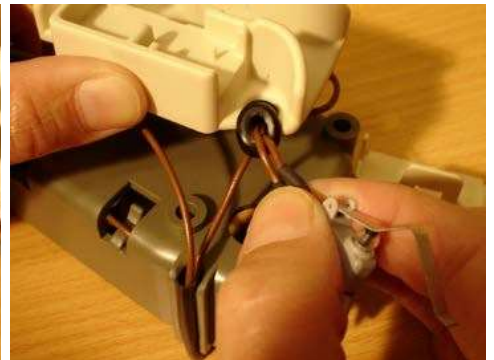

H

Replace the four screws from the mechanism inside the toilet.

Replace the screw in the flush knob with a long philip head screwdriver.



I

Replace the plug from the flush knob.

Replace waste tank back into the toilet.

