



Westinghouse



## ELECTRIC CARVING KNIFE INSTRUCTION MANUAL

220~240V

80W

WHECK01K



# CONTENTS

## **SAFETY INFORMATION**

Important Safety Instructions .....	1 - 2
Electrical Requirements .....	3

## **SETUP AND USE**

Installation Guide .....	3
Parts and Features .....	4
Assembly and operation .....	5

<b>CLEANING AND CARE</b> .....	5
--------------------------------	---

<b>WARRANTY</b> .....	6-7
-----------------------	-----

Figures and illustrations in this User Manual are provided for reference only and may differ from the actual product appearance.

Product design and specifications may be changed without notice.

# IMPORTANT SAFETY INSTRUCTIONS

## **DANGER**

**DANGER** - Immediate hazards which **WILL** result in severe personal injury or death.

## **WARNING**

**WARNING** - Hazards or unsafe practices which **COULD** result in severe personal injury or death.

## **CAUTION**






**CAUTION** - Hazards or unsafe practices which **COULD** result in minor personal injury.

1. Read all instructions carefully before using your new electric carving knife.
2. Always turn the power off at the power outlet before you remove or insert the power plug. Remove by grasping the plug - do not pull on the cord.
3. Do not immerse the electric carving knife body in water or any other liquid.
4. Do not operate the electric carving knife if:
  - i) the cord or plug is split, melted or damaged.
  - ii) the electric carving knife has malfunctioned.
  - iii) the electric carving knife if it has been damaged.

If any of the above incidents occur, return your electric carving knife to the nearest authorised service center for examination, repair or adjustment.

5. This electric carving knife is not intended to be operated by means of an external timer or separate remote-control system.
6. Close supervision is necessary when any appliance is used by or near children.
7. Any appliance that has been dropped or damaged should not be used until examined by an authorised service center.
8. Do not permit the mains supply cord or plug to touch hot objects or allow the power cord to lay across the electric carving knife.
9. If the mains supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.
10. This appliance is deemed for use indoors only.
11. Never plug the appliance into the power outlet if the serrated blades are attached.
12. Do not under any circumstances immerse the power cord, mains plug or electric carving knife body in water or any other liquid.
13. Do not at any time, place hands or other body parts into the path of the electric carving knife whilst in operation.

## IMPORTANT SAFETY INSTRUCTIONS

14. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance in a safe way by the person responsible for their safety, and understand the hazards involved.
15. Children should not play with the electric carving knife.
16. Keep the electric carving knife and its cord out of reach of children less than 12 years old.
17. This electric carving knife should not be used in a commercial environment such as restaurant, hotel or hostel dining room.
18. Always use this electric carving knife with a power outlet of the voltage (A.C. only) marked on the back of the electric carving knife.
19. Do not use the electric carving knife for any purpose other than its intended use.
20. Do not allow the power cord of this electric carving knife to hang over the edge of a table or bench top.
21. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.
22. Do not place your electric carving knife on or near a hot gas flame, electrical element, heated oven or any other hot surface.
23.  **WARNING:** The blades are very sharp, handle with care particularly when cleaning the blades.
24.  **WARNING:** Do not operate the appliance continuously for longer than five minutes as the appliance may overheat.
25.  **WARNING:** Misuse may cause potential injury.
26.  **WARNING:** Do not attempt to sharpen the blades yourself, have a qualified knife sharpener sharpen the blades for you.
27.  **WARNING:** Switch off the appliance and disconnect from the power supply before changing accessories or approaching parts that move in use.

# ELECTRICAL REQUIREMENTS

## POWER SUPPLY CORD

1. Do not attempt to modify the power cord or plug in any way.
2. A short power supply cord is provided to reduce the risk of the user becoming entangled in or tripping over a longer cord.
3. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman install an outlet near the appliance.

NOTE: Neither Westinghouse nor the retailer can accept any liability for damage to the product or personal injury resulting due to failure to observe the electrical connection procedures.

NOTE: Westinghouse recommends the use of a residual current device (RCD) with a tripping current not exceeding 30mA in the electrical circuit supplying power to all appliances.

# INSTALLATION GUIDE

1. Carefully unpack your electric carving knife.
2. Carefully remove packaging around the electric carving knife and power cord. Do not remove warning labels.
3. Wash blade accessories before use.

**WARNING:** ⚠ Do not under any circumstances immerse the electric carving knife body, mains cord or mains plug in water or any other liquid.

## PARTS AND FEATURES



1. Blade Release Button

2. Operation Trigger

3. Handle

4. Blade Locking Pin and Guide

5. Blades

6. Protective Handles

## ASSEMBLY AND OPERATION

1. Plug in the power cord and ensure the cord is not near the food that you will be cutting.
2. Ensure the blades are connected together via the locking pin.
3. Push and hold the blade release buttons and insert the prong end of the blades into the handle. Once the blades clip into the handle, release the blade release buttons.
4. Hold the handle so that the blades are directly above the food and parallel to the cutting board underneath the food. Lower the unit whilst pulling the operation trigger, using a slight back and forth movement with the unit to ease operation.

NOTE: Only pull the operation trigger as you are cutting and ensure to cease pulling the operation trigger in between slices.

NOTE: Ensure to only grab the blades by the protective blade handles when handling.

## CLEANING AND CARE

Ensure that the unit is unplugged and the blades have been removed from the handle before cleaning.

To clean the handle, ensure to use a damp cloth with a non-abrasive detergent. Do not immerse the handle in water or any liquid and avoid any water or liquid leaking into the motor body.

To clean the blades, split them up by aligning the locking pin with the enlarged end of the guide and allow the pin to fall through. Once split, clean the blades with a non-abrasive sponge and mild detergent or place them in the dishwasher.

## LIMITED WARRANTY

1. Nothing in this warranty affects the consumers rights under the Australian Consumer Law. The benefits to the Consumer under this Warranty are in addition to the rights and remedies of the buyer under any Consumer Guarantees. The Australian Consumer Law requires that we confirm that:  

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. Subject to Clause 1, the Seller warrants that Westinghouse branded products will be free of manufacturing defects and will perform to the Seller's specifications subject to the following clauses.
3. The benefit of this Warranty extends only to the owner of the property in which the Products manufactured or supplied by the Seller are installed and used by the owner for the duration of the Warranty Period.
4. The Warranty commences on the date of the purchase of the product and continues for the benefit of the Owner for the Warranty Period. If within the Warranty Period a manufacturing defect is discovered in the Product, or the Product fails to perform to the Seller's specifications as a result of some defect in material or workmanship in the Product, then the Seller will at its own discretion:
  - a.) Repair or replace the Product at the cost of the Seller, including but not limited to labour and travel costs. Goods repaired or replaced under this Warranty will be warranted for the remaining period of the Warranty.
  - b.) Refund the purchase price paid by the consumer.
5. The Warranty does not apply to Product that:
  - a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
  - b.) Has been misused or neglected.
  - c.) Has been damaged accidentally or by acts of God including fire and flooding.
  - d.) Has been used or operated contrary to operating or maintenance instructions.
  - e.) Has been damaged by the Consumer or a third party authorised to act for the consumer in transit from the Sellers store to the Consumer.
6. In order to make a claim under the Warranty, the Owner must, where possible return the goods to the Seller's store at the Owner's cost. Proof of purchase must be supplied in all cases.
7. The seller will examine any returned Products and if the Seller determines that there is an apparent defect through no fault of the Owner, the Seller will:
  - a.) Make note of the Owner's contact details including the Owner's telephone number which the owner can be contacted during business hours, postal address and e-mail address.



- b.) Make note of the defects reported by the Owner.
  - c.) Take back the defective goods from the owner and determine within a reasonable time through dialogue with the Seller whether the goods are defective.
  - d.) Advise the owner within a reasonable time frame whether it accepts or rejects the Product claim.
  - e.) If the Seller accepts the return of the Product, the Seller must arrange to have
    - i) The Product repaired or,
    - ii) Replace the damaged or faulty Product or,
    - iii) Refund the purchase price.
8. The Seller will not accept any returned Product which has not been returned strictly in accordance with this Warranty.
9. For the purpose of this Warranty:
- a.) Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010 (Cth).
  - b.) Consumer means the Purchaser of goods from the seller.
  - c.) Consumer means a Consumer as that term is set out in section 3 of the Australian Consumer Law.
  - d.) Consumer Guarantees means the guarantees under the Australian Consumer Law.
  - e.) Implied terms means any guarantees, conditions, warranties or other terms implied by any Australian Commonwealth, State or Territory laws, (excluding the Australian Consumer Law) or the law of any other jurisdiction.
  - f.) Owner has the meaning set out in clause 3.
  - g.) Warranty means this warranty.
  - h.) Product means the Product/s bought by the Owner from the Seller that fall under this warranty.
  - i.) Warranty Period means:
    - i) In relation to Cast Iron Cookware: 3 Year Limited Warranty.
    - ii) In relation to Non-Stick Cookware: 3 Year Limited Warranty
    - iii) In relation to Cooking Utensils: 3 Year Limited Warranty
    - iv) In relation to Knives/Knife Block Sets: 3 Year Limited Warranty
    - v) In relation to Stainless Steel Cookware: 10 Year Limited Warranty
    - vi) In relation to Chopping boards: 1 Year Limited Warranty
    - vii) In relation to Small Appliances: 1 Year Limited Warranty



# Westinghouse

**CUSTOMER SERVICE - 1300 883 109**

IMPORTED AND DISTRIBUTED BY RVM AUSTRALIA PTY LTD.  
11 Tamara Drive, Cockburn Central, WA 6164  
MADE IN CHINA

© 2023 RVM AUSTRALIA PTY LTD. ALL RIGHTS RESERVED.

™ and WESTINGHOUSE are trademarks of Westinghouse Electric Corporation.  
Used under license by RVM AUSTRALIA PTY LTD. ALL RIGHTS RESERVED.