



# MILK FROTHER INSTRUCTION MANUAL

220~240V

650W

WHMF03K



# CONTENTS

## **SAFETY INFORMATION**

Important Safety Instructions .....	1 - 2
Electrical Requirements .....	3

## **SETUP AND USE**

Installation Guide .....	3
Parts and Features .....	4
Milk Frother Operation .....	5

<b>CLEANING AND CARE .....</b>	<b>5</b>
--------------------------------	----------

<b>TROUBLESHOOTING .....</b>	<b>6</b>
------------------------------	----------

<b>WARRANTY .....</b>	<b>7 - 8</b>
-----------------------	--------------

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.

Product design and specifications may be changed without notice.

# IMPORTANT SAFETY INSTRUCTIONS

## **DANGER**

**DANGER** - Immediate hazards which **WILL** result in severe personal injury or death.













 
## **WARNING**

**WARNING** - Hazards or unsafe practices which **COULD** result in severe personal injury or death.

## **CAUTION**

**CAUTION** - Hazards or unsafe practices which **COULD** result in minor personal injury.

## \*\*\*WARNING\*\*\*

1. Read all instructions carefully before using your new milk frother. Keep these instructions in a safe place.
2. Always use this milk frother with a power outlet of the voltage (A.C. only) marked on the back of the appliance.
3.  **DANGER** Do not operate this milk frother if:
  - i) the cord or plug is split, melted or damaged.
  - ii) the appliance has malfunctioned.
  - iii) the appliance has been damaged in any manner.If any of the above incidents occur, return the milk frother to the nearest authorised service center for examination, repair or adjustment.
4.  **DANGER** Do not under any circumstances immerse the power cord, mains plug or milk frother main body in water or any other liquid.
5.  **WARNING** Incorrect operation and improper use may damage the milk frother or parts thereof, and cause severe personal injury.
6.  **WARNING** When operating the milk frother, touch body and buttons only as outer surfaces may become hot whilst the milk frother is in use.
7.  **WARNING** Do not remove the lid whilst the milk frother is operating, as there is a risk of burns or scalding.
8.  **WARNING** Do not plug the appliance to mains before it is fully assembled.
9.  **WARNING** Exercise caution when removing the frothing disc from the milk frother jug and ensure the appliance is turned off and unplugged whilst fitting the frothing disc.
10.  **WARNING** Keep hands and utensils out of the milk frother jug whilst operating to reduce the risk of severe injury.
11.  **WARNING** Do not handle the appliance with wet hands.
12.  **CAUTION** The milk frother should not be left unattended whilst in operation.
13.  **CAUTION** Keep the milk frother and its cord out of reach of children younger than 8 years old.
14.  **CAUTION** It is not recommended to run the milk frother continuously for more than 5 minutes at a time for light substances. Do not mix dry, thick or heavy mixtures continuously for more than 45 seconds.
15.  **CAUTION** Do not use this milk frother with any attachment other than the ones supplied.
16. Always ensure hands are dry before handling the plug or switching on the appliance.

## IMPORTANT SAFETY INSTRUCTIONS

17. Ensure the milk frother is switched off and unplugged from the power source prior to cleaning.
18. This milk frother is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the milk frother in a safe way by the person responsible for their safety, and understand the hazards involved.
19. Children should be supervised not to play with the milk frother.
20. Always turn off the power at the power outlet before you insert or remove the power plug. Remove by grasping the plug - do not pull on the cord.
21. This appliance is intended for non-commercial, indoor use only. Do not use this appliance for anything other than its intended use.
22. Always use the appliance on a stable, secure, dry and level surface.
23. This appliance is not intended to be operated by means of an external timer or separate remote-control system.
24. Wait for the milk frother to cool before moving.
25. Pay close attention when using this appliance near children.
26. Do not place your milk frother on or near a hot gas flame, electric element, heated oven or any hot surface.
27. Do not place the milk frother on top of any other appliance.
28. Do not permit the mains supply cord or plug to touch hot objects, or allow the power cord to lay across the milk frother main body.
29. Do not allow the power cord of this appliance to hang over the edge of a table or bench top.
30. Do not use harsh or abrasive cleaning agents or any sharp instruments for cleaning the appliance. When the appliance is cool to touch, the outside surface may be wiped clean with a soft, damp cloth and then dried thoroughly. If necessary, a mild dishwashing detergent may be applied to the cloth but not directly applied to the milk frother main body.
31. Immediately unplug the milk frother from mains power if malfunction occurs.
32. If the appliance has been dropped or damaged, it should not be used until examined by an authorised service center.
33. If the mains supply cord is damaged, it must be replaced by the manufacturer, it's service agent or a similarly qualified person in order to avoid a hazard.
34. For added safety, electrical appliances should be connected to a power outlet that is protected by a residual current device (RCD), also often referred to as a 'Safety Switch'. Your switchboard may already incorporate an RCD. If unsure, call an electrician for verification and fitting if necessary.
35. This appliance is intended to be used in household and similar applications such as:
  - staff kitchen areas in shops, offices and other working environments;
  - residential farm houses;
  - by clients in hotels, motels and other residential type environments;
  - bed and breakfast type environments.

# ELECTRICAL REQUIREMENTS

## POWER SUPPLY CORD

1. Do not attempt to modify the power cord or plug in any way.
2. A short power supply cord is provided to reduce the risk of entanglement or tripping over.
3. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman install an outlet near the appliance.

**NOTE:** Neither Westinghouse nor the retailer can accept any liability for damage to the product or personal injury resulting due to failure to observe the electrical connection procedures.

# INSTALLATION GUIDE

1. Carefully unpack your induction milk frother.
2. Carefully remove packaging around the milk frother and straighten the power cord. Do not remove warning labels.
3. Wash the jug and lid before use.
4. Wipe the button of the unit with a lightly damp cloth.

**⚠ DANGER** Do not under any circumstances immerse the power cord, mains plug or milk frother main body in water or any other liquid.

## PARTS AND FEATURES



1. Milk Jug Lid
2. Main Body
3. Control Panel

4. Frothing Disc
5. Milk Jug Handle
6. Milk Jug

## MILK FROTHER OPERATION

1. Ensure the jug, frothing disc and lid are cleaned before the first use. Wash with warm water and mild detergent, then leave to dry before operating.
2. Insert the frothing disc onto the spindle on the bottom of the inside of the jug. Pour in the milk and/or other ingredients, then place the lid on top.
3. Ensure there is no liquid underneath the jug before placing the jug on top of the main body. Now insert the power plug into the AC outlet and switch on.
4. Press the control panel once to switch the unit on, then continue to press the button to cycle between the four different functions. Once the desired function has been selected, leave the unit for 5 seconds and the unit will begin operation under the selected function.
5. The unit will automatically halt operation once the cycle is complete, however you may halt the unit before it completes the cycle by holding your finger down on the control panel until the unit halts operation.

## CLEANING & CARE

1. Remove the jug from the main body and wash the lid, jug and frothing disc with warm water and mild detergent. DO NOT submerge the main body in water under any circumstances.
2. Rinse the lid, jug and frothing disc with fresh water and ensure all items are dried thoroughly before placing back into storage.
3. Store in a dry place away from steam and humidity where possible.

**DANGER** Do not under any circumstances immerse the power cord, mains plug or main body in water or any other liquid.

**WARNING** Exercise caution when inserting or removing the frothing disc from the milk jug.

# TROUBLESHOOTING

## BEFORE CALLING FOR SERVICE

If the milk frother fails to operate:

1. Check to make sure the milk frother is plugged in correctly and securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it back in securely.
2. Check for a blown or tripped circuit breaker in your home. If these seem to be working correctly, test another appliance in the same outlet to ensure the outlet is working correctly.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, DO NOT TRY TO ADJUST OR REPAIR THE MILK FROTHER YOURSELF.

## CUSTOMER SERVICE

In the event you believe your milk frother to be defective, please return it along with your sales receipt to the place of purchase for resolution.

For any enquiries, please call our service center on: Tel: 1300 883 109

## TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the milk frother still does not operate correctly, it may be defective.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Milk frother does not turn on.	Milk frother is not plugged in.	Check that milk frother is plugged into a working power outlet and turned on.
Milk isn't frothing when operating on a frothing function.	Frothing disc isn't installed correctly.	Re-read instructions and ensure all steps are followed correctly.
Control panel is unresponsive when pressed.	The control panel is dirty.	Clean the control panel with a lightly damp cloth until cleaned.



## LIMITED WARRANTY

1. Nothing in this warranty affects the Consumer's rights under the Australian Consumer Law. The benefits to the Consumer under this Warranty are in addition to the rights and remedies of the buyer under any Consumer Guarantees. The Australian Consumer Law requires that we confirm that:  

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. Subject to Clause 1, the Seller warrants that Westinghouse branded products will be free of manufacturing defects and will perform to the Seller's specifications subject to the following clauses.
3. The benefit of this Warranty extends only to the owner of the property in which the Products manufactured or supplied by the Seller are installed and used by the owner for the duration of the Warranty Period.
4. The Warranty commences on the date of the purchase of the product and continues for the benefit of the Owner for the Warranty Period. If within the Warranty Period a manufacturing defect is discovered in the Product, or the Product fails to perform to the Seller's specifications as a result of some defect in material or workmanship in the Product, then the Seller will at its own discretion:
  - a.) Repair or replace the Product at the cost of the Seller, including but not limited to labour and travel costs. Goods repaired or replaced under this Warranty will be warranted for the remaining period of the Warranty.
  - b.) Refund the purchase price paid by the consumer.
5. The Warranty does not apply to Product that:
  - a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
  - b.) Has been misused or neglected.
  - c.) Has been damaged accidentally or by acts of God including fire and flooding.
  - d.) Has been used or operated contrary to operating or maintenance instructions.
  - e.) Has been damaged by the Consumer or a third party authorised to act for the consumer in transit from the Sellers store to the Consumer.
6. In order to make a claim under the Warranty, the Owner must, where possible return the goods to the Seller's store at the Owner's cost. Proof of purchase must be supplied in all cases.
7. The seller will examine any returned Products and if the Seller determines that there is an apparent defect through no fault of the Owner, the Seller will:
  - a.) Make note of the Owner's contact details including the Owner's telephone number which the owner can be contacted during business hours, postal address and e-mail address.

- b.) Make note of the defects reported by the Owner.
  - c.) Take back the defective goods from the owner and determine within a reasonable time through dialogue with the Seller whether the goods are defective.
  - d.) Advise the owner within a reasonable time frame whether it accepts or rejects the Product claim.
  - e.) If the Seller accepts the return of the Product, the Seller must arrange to have
    - i) The Product repaired or,
    - ii) Replace the damaged or faulty Product or,
    - iii) Refund the purchase price.
8. The Seller will not accept any returned Product which has not been returned strictly in accordance with this Warranty.
9. For the purpose of this Warranty:
- a.) Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010 (Cth).
  - b.) Consumer means the Purchaser of goods from the seller.
  - c.) Consumer means a Consumer as that term is set out in section 3 of the Australian Consumer Law.
  - d.) Consumer Guarantees means the guarantees under the Australian Consumer Law.
  - e.) Implied terms means any guarantees, conditions, warranties or other terms implied by any Australian Commonwealth, State or Territory laws, (excluding the Australian Consumer Law) or the law of any other jurisdiction.
  - f.) Owner has the meaning set out in clause 3.
  - g.) Warranty means this warranty.
  - h.) Product means the Product/s bought by the Owner from the Seller that fall under this warranty.
  - i.) Warranty Period means:
 

i) In relation to Cast Iron Cookware:	3 Year Limited Warranty.
ii) In relation to Non-Stick Cookware:	3 Year Limited Warranty
iii) In relation to Cooking Utensils:	3 Year Limited Warranty
iv) In relation to Knives/Knife Block Sets:	3 Year Limited Warranty
v) In relation to Stainless Steel Cookware:	10 Year Limited Warranty
vi) In relation to Chopping boards:	1 Year Limited Warranty
vi) In relation to Small Appliances:	1 Year Limited Warranty





# Westinghouse

[www.westinghousesmallappliances.com.au](http://www.westinghousesmallappliances.com.au)

**CUSTOMER SERVICE - AU: 1300 883 109**  
[info@westinghousesmallappliances.com.au](mailto:info@westinghousesmallappliances.com.au)

**CUSTOMER SERVICE - NZ: 0508 776 546**  
[info@westinghousesmallappliances.co.nz](mailto:info@westinghousesmallappliances.co.nz)

IMPORTED AND DISTRIBUTED BY RVM AUSTRALIA PTY LTD.  
11 Tamara Drive, Cockburn Central, WA 6164  
MADE IN CHINA

© 2023 RVM AUSTRALIA PTY LTD. ALL RIGHTS RESERVED.

® & WESTINGHOUSE are trademarks of Westinghouse Electric Corporation.  
Used under license by RVM AUSTRALIA PTY LTD. ALL RIGHTS RESERVED.