



STICK MIXER INSTRUCTION MANUAL

220~240V

300W

WHSM06SS



CONTENTS

SAFETY INFORMATION

Important Safety Instructions	1 - 2
Electrical Requirements	3

SETUP AND USE

Installation Guide	3
Parts and Features	4
Stick Mixer Operation	5

CLEANING AND CARE	6
--------------------------------	----------

TROUBLESHOOTING	7
------------------------------	----------

WARRANTY	8 - 9
-----------------------	--------------

Figures and illustrations in this User Manual are provided for reference only and may differ from actual product appearance.

Product design and specifications may be changed without notice.

IMPORTANT SAFETY INSTRUCTIONS

DANGER

DANGER - Immediate hazards which WILL result in severe personal injury or death.

WARNING




 
 



 




WARNING - Hazards or unsafe practices which COULD result in severe personal injury or death.

CAUTION

CAUTION - Hazards or unsafe practices which COULD result in minor personal injury.

WARNING

Keep hair, hands, fingers and other body parts away from the blade end of the stick mixer whilst in operation.

1. Read all instructions carefully before using your new stick mixer. Keep these instructions in a safe place.
2. Always use this stick mixer with a power outlet of the voltage (A.C. only) marked on the back of the appliance.
3.  **DANGER** Do not operate stick mixer if:
 - i) the cord or plug is split, melted or damaged.
 - ii) the appliance has malfunctioned.
 - iii) the appliance has been damaged in any manner.If any of the above incidents occur, return the stick mixer to the nearest authorised service center for examination, repair or adjustment.
4.  **DANGER** Do not under any circumstances immerse the power cord, mains plug or stick mixer body in water or any other liquid.
5.  **WARNING** Incorrect operation and improper use may damage the stick mixer or parts thereof, and cause severe personal injury.
6.  **WARNING** When operating the stick mixer, use handle and buttons only as outer surfaces may become hot whilst the stick mixer is in use.
7.  **WARNING** Do not blend hot or boiling foods or liquids as there is a risk of burns or scalding.
8.  **WARNING** The stick mixer blades are very sharp, avoid touching them and handle with care.
9.  **WARNING** Do not plug the appliance to mains before it is fully assembled.
10.  **WARNING** Exercise caution when removing the attachments from the stick mixer and ensure the appliance is turned off and unplugged whilst fitting attachments.
11.  **WARNING** Keep hands and utensils out of the blending container while blending to reduce the risk of severe injury. A scraper may be used but must only be used when the stick mixer is not running.
12.  **WARNING** Do not handle the appliance with wet hands.
13.  **CAUTION** The stick mixer should not be left unattended while in operation.
14.  **CAUTION** Keep the stick mixer and its cord out of reach of children younger than 8 years old.
15.  **CAUTION** It is not recommended to run the stick mixer continuously for more than 1 minute at a time for light substances. Do not mix dry, thick or heavy mixtures continuously for more than 15 seconds. Stop the operation and stir the ingredients before continuing.

IMPORTANT SAFETY INSTRUCTIONS

16. **⚠ CAUTION** Do not use this stick mixer with any attachment other than the one supplied.
17. **⚠ CAUTION** Do not chop extremely hard food items, such as ice cubes, nutmeg as this may cause damage to the stick mixer.
18. All stick mixers are designed to operate only when the power buttons remain depressed.
19. Always ensure hands are dry before handling the plug or switching on the appliance.
20. Ensure the stick mixer is switched off and unplugged from the power source prior to cleaning.
21. This stick mixer is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the stick mixer in a safe way by the person responsible for their safety, and understand the hazards involved.
22. Children should be supervised not to play with the stick mixer.
23. Always turn off the power at the power outlet before you insert or remove the power plug. Remove by grasping the plug - do not pull on the cord.
24. This appliance is intended for non-commercial, indoor use only. Do not use this appliance for anything other than its intended use.
25. Always hold the stick mixer firmly and upright while using it.
26. Always use the appliance on a stable, secure, dry and level surface.
27. This stick mixer is not intended to be operated by means of an external timer or separate remote-control system.
28. Wait for the stick mixer to cool before moving. Carry only by the handle.
29. Pay close attention when using this appliance near children.
30. Do not place your stick mixer on or near a hot gas flame, electric element, heated oven or any hot surface.
31. Do not place the stick mixer on top of any other appliance.
32. Do not permit the mains supply cord or plug to touch hot objects, or allow the power cord to lay across the stick mixer body or blades.
33. Do not allow the power cord of this appliance to hang over the edge of a table or bench top.
34. Keep hands, fingers and utensils away from the blades whilst blending to reduce the risk of severe injury.
35. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
36. Do not operate the appliance continuously for longer than one minute as the appliance may overheat.
37. **⚠ CAUTION** Misuse may cause potential injury.
38. Ensure the unit is unplugged from the power source if left unattended.

ELECTRICAL REQUIREMENTS

POWER SUPPLY CORD

1. Do not attempt to modify the power cord or plug in any way.
2. A short power supply cord is provided to reduce the risk of entanglement or tripping over.
3. If the power supply cord is too short, do not use an extension cord. Have a qualified electrician or serviceman install an outlet near the appliance.

NOTE: Neither Westinghouse nor the retailer can accept any liability for damage to the product or personal injury resulting due to failure to observe the electrical connection procedures.

NOTE: Westinghouse recommends the use of a residual current device (RCD) with a tripping current that does not exceed 30mA in the electrical circuit supplying power to all appliances.

INSTALLATION GUIDE

1. Carefully unpack your electric stick mixer.
2. Carefully remove packaging around the stick mixer and straighten the power cord. Do not remove warning labels.
3. Wash blender blade attachment and allow to dry before use.

⚠ DANGER Do not under any circumstances immerse the power cord, mains plug or stick mixer body in water or any other liquid.

⚠ WARNING The stick mixer blades are very sharp, avoid touching them and handle with care.

⚠ WARNING Exercise caution when removing the attachments from the stick mixer and ensure the appliance is turned off and unplugged whilst fitting attachments.


PARTS AND FEATURES





- | | |
|--------------------------|-----------------------|
| 1. Non-Slip Rubber Cover | 6. Chopper Attachment |
| 2. 800ml Beaker | 7. Whisk Attachment |
| 3. Blender Attachment | 8. Beaters Attachment |
| 4. Masher Attachment | 9. Mixer Body |
| 5. Attachment Stand | |

 
STICK MIXER OPERATION

 
1. Before first use, the accessories must be cleaned. Wash the attachments with warm water and mild detergent. Rinse with fresh water and allow to dry. Your stick mixer is now ready for use.
2. Ensure unit is unplugged from wall power outlet.
3. Whilst holding the stick mixer body upright, insert desired attachment into mixer body and twist the attachment anti-clockwise until it locks.
4. Ensuring your fingers are not pressing either of the buttons on the front of the unit, plug the power cord into the power outlet and switch on.
5. Add ingredients into an appropriate mixing container.
6. Press the on/off or turbo button to start the mixer.
7. After use, unplug from the wall power outlet.
8. Whilst holding the stick mixer body upright, twist the attachment clockwise and lightly pull away from the stick mixer body to remove the attachment.

 **WARNING** The blender and chopper blades are very sharp, avoid touching them and handle with care.

 **WARNING** Do not plug the appliance into power before it is fully assembled.

 **WARNING** Exercise caution when removing the attachments from the stick mixer and ensure the appliance is turned off and unplugged whilst fitting attachments.

 **WARNING** Do not blend hot or boiling foods or liquids as there is a risk of burns or scalding.

 **CAUTION** It is not recommended to run the stick mixer continuously for more than 1 minute at a time for light substances. Do not mix dry, thick or heavy mixtures continuously for more than 15 seconds. Stop the operation and stir the ingredients before continuing. Allow the motor to rest for 1 minute between each use.


NOTE: All stick mixers are designed to operate only when the power buttons remain depressed.


NOTE: The non-slip rubber cover can also be used as a lid for the 800ml beaker.


CLEANING & CARE

*****CAUTION: Ensure the gearbox of the masher, whisk and beater is removed before cleaning. To do this, hold the masher upright and twist the gearbox anti-clockwise to release. For the whisk and beaters, simply pull the whisk or beaters out of the gearbox.*****

1. After use, unplug from the wall power outlet then twist the attachment clockwise, whilst holding the mixer body upright, and lightly pull away from the mixer body to remove the attachment.
2. Do not use harsh or abrasive cleaning agents. The outside surface of the stick mixer body may be wiped clean with a soft, damp cloth and dried thoroughly. If necessary, a mild dishwashing detergent may be applied to the cloth but not directly applied to the stick mixer.
3. Do not soak or immerse the stick mixer body in water or any other liquid.
4. Rinsing the blender blade under warm water should be sufficient to remove most food substances.
5. When washing, non-abrasive cloths and plastic bristle kitchen brushes may be used to remove stubborn food particles from the accessories. Do not use abrasive cloths and cleaning materials as they will damage the surface.
6. Ensure all components are dried thoroughly after cleaning, before placing into storage.
7. Store in a dry place away from steam and humidity where possible.

 **DANGER** Do not under any circumstances immerse the power cord, mains plug or stick mixer body in water or any other liquid.

 **WARNING** The blender and chopper blades are very sharp, avoid touching them and handle with care.

 **WARNING** Exercise caution when removing the blender blade attachment from the stick mixer.

TROUBLESHOOTING

BEFORE CALLING FOR SERVICE

If the stick mixer fails to operate:

1. Check to make sure the stick mixer is plugged in correctly and securely. If it is not, remove the plug from the outlet, wait 10 seconds and plug it back in securely.
2. Check for a blown or tripped circuit breaker in your home. If these seem to be working correctly, test another appliance in the same outlet to ensure the outlet is working correctly.

IF NONE OF THE ABOVE SOLVES THE PROBLEM, DO NOT TRY TO ADJUST OR REPAIR THE STICK MIXER YOURSELF.

CUSTOMER SERVICE

In the event you believe your stick mixer to be defective, please return it along with your sales receipt to the place of purchase for resolution.

For any enquiries, please call our service center on: Tel: 1300 883 109

TROUBLESHOOTING

Troubleshoot your problem by using the chart below. If the stick mixer still does not operate correctly, it may be defective.

TROUBLE	POSSIBLE CAUSE	POSSIBLE REMEDY
Stick mixer does not turn on.	Stick mixer is not plugged in.	Check that stick mixer is plugged into a working power outlet and turned on.
Motor slowing down and appears to be struggling while in use.	Foods are too dense or too much food in your container.	Reduce quantity of food and try again.

LIMITED WARRANTY

1. Nothing in this warranty affects the Consumer's rights under the Australian Consumer Law. The benefits to the Consumer under this Warranty are in addition to the rights and remedies of the buyer under any Consumer Guarantees. The Australian Consumer Law requires that we confirm that:

Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.
2. Subject to Clause 1, the Seller warrants that Westinghouse branded products will be free of manufacturing defects and will perform to the Seller's specifications subject to the following clauses.
3. The benefit of this Warranty extends only to the owner of the property in which the Products manufactured or supplied by the Seller are installed and used by the owner for the duration of the Warranty Period.
4. The Warranty commences on the date of the purchase of the product and continues for the benefit of the Owner for the Warranty Period. If within the Warranty Period a manufacturing defect is discovered in the Product, or the Product fails to perform to the Seller's specifications as a result of some defect in material or workmanship in the Product, then the Seller will at its own discretion:
 - a.) Repair or replace the Product at the cost of the Seller, including but not limited to labour and travel costs. Goods repaired or replaced under this Warranty will be warranted for the remaining period of the Warranty.
 - b.) Refund the purchase price paid by the consumer.
5. The Warranty does not apply to Product that:
 - a.) Has failed due to excessive wear and tear beyond what is considered to be reasonable.
 - b.) Has been misused or neglected.
 - c.) Has been damaged accidentally or by acts of God including fire and flooding.
 - d.) Has been used or operated contrary to operating or maintenance instructions.
 - e.) Has been damaged by the Consumer or a third party authorised to act for the consumer in transit from the Sellers store to the Consumer.
6. In order to make a claim under the Warranty, the Owner must, where possible return the goods to the Seller's store at the Owner's cost. Proof of purchase must be supplied in all cases.
7. The seller will examine any returned Products and if the Seller determines that there is an apparent defect through no fault of the Owner, the Seller will:
 - a.) Make note of the Owner's contact details including the Owner's telephone number which the owner can be contacted during business hours, postal address and e-mail address.

- b.) Make note of the defects reported by the Owner.
 - c.) Take back the defective goods from the owner and determine within a reasonable time through dialogue with the Seller whether the goods are defective.
 - d.) Advise the owner within a reasonable time frame whether it accepts or rejects the Product claim.
 - e.) If the Seller accepts the return of the Product, the Seller must arrange to have
 - i) The Product repaired or,
 - ii) Replace the damaged or faulty Product or,
 - iii) Refund the purchase price.
8. The Seller will not accept any returned Product which has not been returned strictly in accordance with this Warranty.
9. For the purpose of this Warranty:
- a.) Australian Consumer Law means the law as set out in Schedule 2 of the Competition and Consumer Act 2010 (Cth).
 - b.) Consumer means the Purchaser of goods from the seller.
 - c.) Consumer means a Consumer as that term is set out in section 3 of the Australian Consumer Law.
 - d.) Consumer Guarantees means the guarantees under the Australian Consumer Law.
 - e.) Implied terms means any guarantees, conditions, warranties or other terms implied by any Australian Commonwealth, State or Territory laws, (excluding the Australian Consumer Law) or the law of any other jurisdiction.
 - f.) Owner has the meaning set out in clause 3.
 - g.) Warranty means this warranty.
 - h.) Product means the Product/s bought by the Owner from the Seller that fall under this warranty.
 - i.) Warranty Period means:

i) In relation to Cast Iron Cookware:	3 Year Limited Warranty.
ii) In relation to Non-Stick Cookware:	3 Year Limited Warranty
iii) In relation to Cooking Utensils:	3 Year Limited Warranty
iv) In relation to Knives/Knife Block Sets:	3 Year Limited Warranty
v) In relation to Stainless Steel Cookware:	10 Year Limited Warranty
vi) In relation to Chopping boards:	1 Year Limited Warranty
vi) In relation to Small Appliances:	1 Year Limited Warranty



Westinghouse

www.westinghousesmallappliances.com.au

CUSTOMER SERVICE - AU: 1300 883 109
info@westinghousesmallappliances.com.au

CUSTOMER SERVICE - NZ: 0508 776 546
info@westinghousesmallappliances.co.nz

IMPORTED AND DISTRIBUTED BY RVM AUSTRALIA PTY LTD.
11 Tamara Drive, Cockburn Central, WA 6164
MADE IN CHINA

© 2023 RVM AUSTRALIA PTY LTD. ALL RIGHTS RESERVED.

® & WESTINGHOUSE are trademarks of Westinghouse Electric Corporation.
Used under license by RVM AUSTRALIA PTY LTD. ALL RIGHTS RESERVED.